

treesse

minipool

Soul



Installation manual

READ AND FOLLOW ALL INSTRUCTIONS

The installation of this spa is simple and immediate, however we advise you to read this manual carefully before installing it.

If you have problems, contact your authorised dealer.

Good luck with your work!

WARNING

REDUCE THE RISK OF ELECTROCUTION

1. Never place an electric appliance within 5 feet of the spa.

REDUCE THE RISK OF CHILD DROWNING

1. Supervise children at all times.
2. Attach spa cover after each use.

REDUCE THE RISK OF OVERHEATING

1. Check with the doctor before to use if pregnant, diabetic, in poor health, or under medical care.
2. Exit immediately if uncomfortable, dizzy, or sleepy. Spa heat can cause hypertermia and unconsciousness.
3. Spa heat in conjunction with alcohol, drugs, or medication can cause unconsciousness.

WHEN PREGNANT , soaking in hot water for long periods can harm your fetus. Measure water temperature before entering.

1. Do not enter spa if water is hotter than 100° F (38° C).
2. Do not stay in spa for longer than 10 minutes.

Contents

Safety instructions	4
EXPLANATION OF PICTOGRAMS	7
Preliminary operations	8
1 PREPARATIONS AND CHOICE OF POSITION	8
2 CHECKING SPA INTEGRITY	8
OUTDOOR INSTALLATION	8
INDOOR INSTALLATION	8
Transport and position	9
1 MOVING	9
2 POSITIONING	10
TEMPORARY POSITIONING	10
POSITIONING IN THE PLANNED LOCATION	10
Installation	11
1 DESCRIPTION OF COMPONENTS	11
2 QUALIFICATIONS OF THE INSTALLER	11
3 CONNECTIONS REQUIRED	12
4 WATER SUPPLY	13
CHARACTERISTICS OF THE WATER SUPPLY	13
TAP WATER AND WELL WATER	13
WATER HARDNESS	13
WATER ALKALINITY	13
5 CLEANING THE PAPER FILTER	14
6 EMPTYING THE SPA	14
7 ELECTRICAL CONNECTIONS	15
SAFETY ZONE	17
TESTING AFTER INSTALLATION	17
FIRST RUN	18
1 FILLING THE SPA	18
2 FIRST RUN	19
Decorative panels	22
Cover	24

IMPORTANT SAFETY INSTRUCTIONS

1. READ AND FOLLOW ALL INSTRUCTIONS.

2. **WARNING** – To reduce the risk of injury, do not permit children to use this product unless they are closely supervised at all times.

3. A wire connector is provided on this unit to connect a minimum 8 AWG (8.4 mm²) solid copper conductor between this unit and any metal equipment, metal enclosures of electrical equipment, metal water pipe, or conduit within 5 feet (1.5 m) of the unit. Minimum No. 6 AWG required in Canada. damage to the equipment.

4. **DANGER** – Risk of Accidental Drowning. Extreme caution must be exercised to prevent unauthorized access by children. To avoid accidents, ensure that children cannot use this spa unless they are supervised at all times.

5. **DANGER** – Risk of Injury. The suction fittings in this spa are sized to match the specific water flow created by the pump. Should the need arise to replace the suction fittings or the pump, be sure that the flow rates are compatible. Never operate spa if the suction fittings are broken or missing. Never replace a suction fitting with one rated less than the flow rate marked on the original suction fitting.

6. **DANGER** – Risk of Electric Shock. Install at least 5 feet (1.5 m) from all metal surfaces. As an alternative, a spa may be installed within 5 feet of metal surfaces if each metal surface is permanently connected by a minimum 8 AWG (8.4 mm²) solid copper conductor to the wire connector on the terminal box that is provided for this purpose.

7. **DANGER** – Risk of Electric Shock. Do not permit any electric appliance, such as a light, telephone, radio, or television, within 5 feet (1.5 m) of a spa.

8. **WARNING** – To reduce the risk of injury:

a) The water in a spa should never exceed 40°C (104°F). Water temperatures between 38°C (100°F) and 40°C are considered safe for a healthy adult. Lower water temperatures are recommended for young children and when spa use exceeds 10 minutes.

b) Since excessive water temperatures have a high potential for causing fetal damage during the early months of pregnancy, pregnant or possibly pregnant women should limit spa water temperatures to 38°C (100°F).

c) Before entering a spa, the user should measure the water temperature since the tolerance of water temperature-regulating devices varies.

d) The use of alcohol, drugs, or medication before or during spa use may lead to unconsciousness with the possibility of drowning.

e) Obese persons and persons with a history of heart disease, low or high blood pressure, circulatory system problems, or diabetes should consult a physician before using a spa.

f) Persons using medication should consult a physician before using a spa since some medication may induce drowsiness while other medication may affect heart rate, blood pressure, and circulation.

9. SAVE THESE INSTRUCTIONS.

WARNING: CHILDREN SHOULD NOT USE SPAS OR HOT TUBS WITHOUT ADULT SUPERVISION

AVERTISSEMENT : NE PAS LAISSER LES ENFANTS UTILISER UNE CUVE DE RELAXATION SANS SURVEILLANCE

WARNING: DO NOT USE SPAS OR HOT TUBS UNLESS ALL SUCTION GUARDS ARE INSTALLED TO PREVENT BODY AND HAIR ENTRAPMENT

AVERTISSEMENT : POUR ÉVITER QUE LES CHEVEUX OU UNE PARTIE DU CORPS PUISSENT ÊTRE ASPIRÉS, NE PAS UTILISER UNE CUVE DE RELAXATION SI LES GRILLES DE PRISE D'ASPIRATION NE SONT PAS TOUTES EN PLACE

WARNING: PEOPLE USING MEDICATIONS AND/OR HAVING AN ADVERSE MEDICAL HISTORY SHOULD CONSULT A PHYSICIAN BEFORE USING A SPA OR HOT TUB

AVERTISSEMENT : LES PERSONNES QUI PRENNENT DES MÉDICAMENTS ET (OU) ONT DES PROBLÈMES DE SANTÉ DEVRAIENT CONSULTER UN MÉDECIN AVANT D'UTILISER UNE CUVE DE RELAXATION

WARNING: PEOPLE WITH INFECTIOUS DISEASES SHOULD NOT USE A SPA OR HOT TUB

AVERTISSEMENT : LES PERSONNES ATTEINTES DE MALADIES INFECTIEUSES NE DEVRAIENT PAS UTILISER UNE CUVE DE RELAXATION

WARNING: TO AVOID INJURY, EXERCISE CARE WHEN ENTERING OR EXITING THE SPA OR HOT TUB

AVERTISSEMENT : POUR ÉVITER DES BLESSURES, USER DE PRUDENCE EN ENTRANT DANS UNE CUVE DE RELAXATION ET EN SORTANT

WARNING: DO NOT USE DRUGS OR ALCOHOL BEFORE OR DURING THE USE OF A SPA OR HOT TUB TO AVOID UNCONSCIOUSNESS AND POSSIBLE DROWNING

AVERTISSEMENT : POUR ÉVITER L'ÉVANOUISSEMENT ET LA NOYADE ÉVENTUELLE, NE PRENDRE NI DROGUE NI ALCOOL AVANT D'UTILISER UNE CUVE DE RELAXATION NI QUAND ON S'Y TROUVE

WARNING: PREGNANT OR POSSIBLY PREGNANT WOMEN SHOULD CONSULT A PHYSICIAN BEFORE USING A SPA OR HOT TUB

AVERTISSEMENT : LES FEMMES ENCEINTES, QUE LEUR GROSSESSE SOIT CONFIRMÉE OU NON, DEVRAIENT CONSULTER UN MÉDECIN AVANT D'UTILISER UNE CUVE DE RELAXATION

WARNING: WATER TEMPERATURE IN EXCESS OF 38 °C CAN BE INJURIOUS TO YOUR HEALTH

AVERTISSEMENT : IL PEUT ÊTRE DANGEREUX POUR LA SANTÉ DE SE PLONGER DANS DE L'EAU À PLUS DE 38 °C

WARNING: BEFORE ENTERING THE SPA OR HOT TUB, MEASURE THE WATER TEMPERATURE WITH AN ACCURATE THERMOMETER

AVERTISSEMENT : AVANT D'UTILISER UNE CUVE DE RELAXATION, MESURER LA TEMPÉRATURE DE L'EAU À L'AIDE D'UN THERMOMÈTRE PRÉCIS

WARNING: DO NOT USE A SPA OR HOT TUB IMMEDIATELY FOLLOWING STRENUOUS EXERCISE

AVERTISSEMENT : NE PAS UTILISER UNE CUVE DE RELAXATION IMMÉDIATEMENT APRÈS UN EXERCICE FATIGANT

WARNING: PROLONGED IMMERSION IN A SPA OR HOT TUB CAN BE INJURIOUS TO YOUR HEALTH

AVERTISSEMENT : L'UTILISATION PROLONGÉE D'UNE CUVE DE RELAXATION PEUT ÊTRE DANGEREUSE POUR LA SANTÉ

WARNING: DO NOT PERMIT ELECTRIC APPLIANCES (SUCH AS A LIGHT, TELEPHONE, RADIO, OR TELEVISION) WITHIN 1.5 M OF THIS SPA OR HOT TUB

AVERTISSEMENT : NE PAS PLACER

D'APPAREIL ÉLECTRIQUE (LUMINAIRE, TÉLÉPHONE, RADIO, TÉLÉVISEUR, ETC) À MOINS DE 1.5 M DE CETTE CUVE DE RELAXATION

CAUTION: MAINTAIN WATER CHEMISTRY IN ACCORDANCE WITH MANUFACTURER'S INSTRUCTIONS

ATTENTION: LA TENEUR DE L'EAU EN MATIÈRES DISSOUTES DOIT ÊTRE CONFORME AUX DIRECTIVES DU FABRICANT.

WARNING: THE USE OF ALCOHOL OR DRUGS CAN GREATLY INCREASE THE RISK OF FATAL HYPERTHERMIA IN HOT TUBS AND SPAS

LA CONSOMMATION D'ALCOOL OU DE DROGUE AUGMENTE CONSIDÉRABLEMENT LES RISQUES D'HYPERTHERMIE MORTELLE DANS UNE CUVE DE RELAXATION.

ERTHERMIA IN HOT TUBS AND SPAS

WARNING: HYPERTHERMIA

"Hyperthermia occurs when the internal temperature of the body reaches a level several degrees above the normal body temperature of 98.6°F. The symptoms of hyperthermia include an increase in the internal temperature of the body, dizziness, lethargy, drowsiness, and fainting. The effects of hyperthermia include failure to perceive heat; failure to recognize the need to exit spa or hot tub; unawareness of impending hazard; fetal damage in pregnant women; physical inability to exit the spa or hot tub; and unconsciousness resulting in the danger of drowning.

WARNING – The use of alcohol, drugs, or medication can greatly increase the risk of fatal hyperthermia."

a) READ AND FOLLOW ALL INSTRUCTIONS

b) A green coloured terminal or a terminal marked G, GR, Ground, Grounding, or the

symbol* is located inside the supply terminal box or compartment. To reduce the risk of electric shock, this terminal must be connected to the grounding means provided in the electric supply service panel with a continuous copper wire equivalent in size to the circuit conductors supplying this equipment. * IEC 60417, Symbol 5019.

c) At least two lugs marked "BONDING LUGS" are provided on the external surface or on the inside of the supply terminal box or compartment. To reduce the risk of electric shock, connect the local common bonding grid in the area of the hot tub or spa to these terminals with an insulated or bare copper conductor not smaller than No. 6 AWG.

d) All field-installed metal components such as rails, ladders, drains, or other similar hardware within 3 m of the spa or hot tub shall be bonded to the equipment grounding bus with copper conductors not smaller than No. 6 AWG.

e) SAVE THESE INSTRUCTIONS.


WARNING – This product is provided with a ground-fault circuit-interrupter (give location). The GFCI must be tested before each use. With the product operating, open the service door. When the product stops operating, this merely indicates that the door is equipped with an electrical interlock. Next, push the test button on the GFCI and close the service door. The product should not operate. Now open the service door, push the reset button on the GFCI and close the service door. The product should now operate normally. When the product fails to operate in this manner, there is a ground current flowing indicating the possibility of an electric shock. Disconnect the power until the fault has been identified and corrected.




Read this guide carefully before installing the appliance, and conserve this


booklet with care for any future consultation of users.


If you do not understand something, contact the manufacturer for an explanation.


 Installation must be carried out by qualified personnel in compliance with local regulations and national provisions regarding civil and industrial systems.

Before making electrical connection to the equipment, the installer must receive the declaration of conformity of the building's systems from the user. Without such document, the Manufacturer cannot be held responsible for damage to the systems or premises where the spa will be installed.


 Comply with regulations, instructions and measurements on the "Pre-installation technical sheet".

 Unauthorised actions, tampering or modifications that do not follow the information provided in this manual can cause damages, injuries or fatal accidents and null and void the warranty.

 During the installation of the spa, do not place objects inside it, even temporarily: they may fall down the drain

 When installing the spa, always use personal protective equipment (e.g., gloves, safety shoes, etc.)



 Persons not involved with appliance installation may not pass through or occupy the work area during appliance assembly.



Ecological notes

Given their potential danger, the packaging materials must be kept out of reach of children and animals, and correctly disposed of in compliance with local regulations.

Treesse invites you to protect the environment by disposing of the material in special separate collection bins.

EXPLANATION OF PICTOGRAMS



Danger! Situation presenting immediate danger, or a hazardous situation that could cause injury or death.



More info: helps the installer understand a topic better



The pictogram refers to text in another document



Ecological notes for respecting the environment

1 PREPARATIONS AND CHOICE OF POSITION



The pre-installation sheet supplied at the time of purchase provides all the information necessary for a correct preparation of the installation environments.

Before installing the spa, check that everything has been prepared. Find below a quick checklist, for complete information always refer to the pre-installation sheet.

Check that:

- A platform or a recess (in the case of recessed installations) of reinforced concrete, with a minimum thickness of 10 cm, has been created, perfectly flat and suitable for supporting the weight of the spa and the people within.
- Ø15 cm vents have been installed to ensure proper ventilation of the technical compartment
- Drainage grating around the perimeter has been installed to help preserve the equipment and the structure (even for indoor installations).
- Non-slip flooring has been installed in the area around the spa.
- For a recessed installation, a technical inspection port measuring at least 50 cm wide has been prepared on all sides of the spa.
- The connections to the electrical grid have been made in compliance with current regulations in force in the country of installation.
- A water softener has been installed for the water used to fill the spa if the water has a high degree of hardness.
- For outdoor recessed versions, the walls have been insulated to protect against the cold.



More information

OUTDOOR INSTALLATION

Preparations :

To run the electric cables from the main electrical panel to the spa underground ducts must be used and adequately protected against freezing by using insulation. It is also recommended to add drainage points in them to prevent standing water.

Choice of position : take into account the proximity of trees or hedges, and note that debris (e.g., leaves) can cause damage to the equipment over time that is not covered by warranty and make maintenance more expensive and frequent. It is also recommended to always install flooring around the spa, possibly anti-slip.

INDOOR INSTALLATION

Preparations : in the area used to access the spa it is recommended to install anti-slip flooring. The evaporation of water in the spa in the presence of high internal temperatures can generate very high levels of humidity in the environment.

To avoid this problem, provide good natural or forced ventilation in the installation environment and, if necessary, a dehumidification system. Damage caused by this phenomenon is not covered by the manufacturer warranty.

Choice of position : Always take into account the size of the spa: narrow passages, doors and steps can be an obstacle to its transport to the desired place.

2 CHECKING SPA INTEGRITY



After having removed the spa from the packing, check its integrity.

Check:


- That there is no visible structural damage.
- That there are no cracks in the surface of the spa or in the outer covering (cracks due to incorrect transport or support are not covered by the warranty).
- The correct position of the sleeves and pipes.
- That any ties are not loosened.

If you notice any anomalies, do not proceed with the installation but rather promptly contact the Manufacturer.

1 MOVING


To move the spa to the place of installation a suitable lifting device (e.g., pallet jack) is required. As an alternative, provide for the availability of eight people.



If the installation is indoor, before moving the spa make sure that it can easily pass through the doors and hallways to reach the desired place of installation.

 Movement must be carried out using personal protective equipment (e.g., gloves, safety shoes, etc.) and taking all the necessary safety precautions for those involved and to not damage the spa.



During transport, lift the spa by holding it exclusively by the edge and NEVER by holding the plumbing lines or operational parts (e.g., pumps, etc.).

 During movement, the surrounding area must be kept free of persons not involved in the operation, animals or objects (e.g., packaging, etc.) that could get in the way.

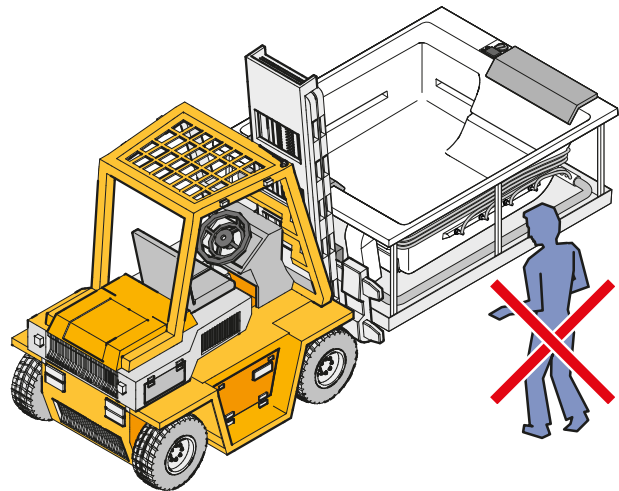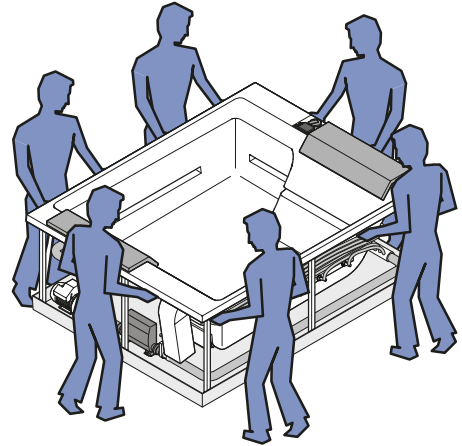

2 POSITIONING

TEMPORARY POSITIONING



The installation of the spa should be done immediately upon receipt.

In any case, once unpacked, if it is necessary to temporarily place it on a surface awaiting the installation, it will be necessary to place level concrete slabs having a minimum thickness of 5 cm under the entire bottom of the spa.

Since the temporary base may shift, it is recommended to leave the spa in that position for the shortest possible time.

POSITIONING IN THE PLANNED LOCATION

In case of installation above ground (freestanding), place the spa in the installation environment (outdoor or indoor) and verify its perfect flatness, essential for proper operation.

For a recessed installation, lower the spa into the prepared space.





If it was not possible to provide a technical inspection port on all sides of the spa, a removable inspection hatch positioned on the side where the spa components are situated, is recommended.



Do not leave the empty spa in DIRECT SUNLIGHT. The surface temperature could rise above 80°C resulting in serious damage, including cavitation and the deformation of the surface and components. Damage caused by direct exposure to sunlight is not covered by the warranty.


In such conditions place a cover (fixed or mobile) to protect the spa.

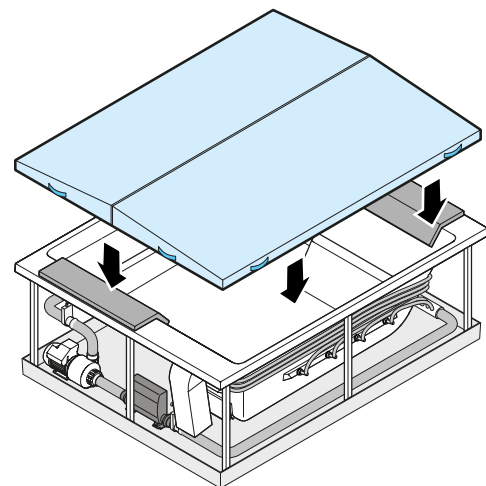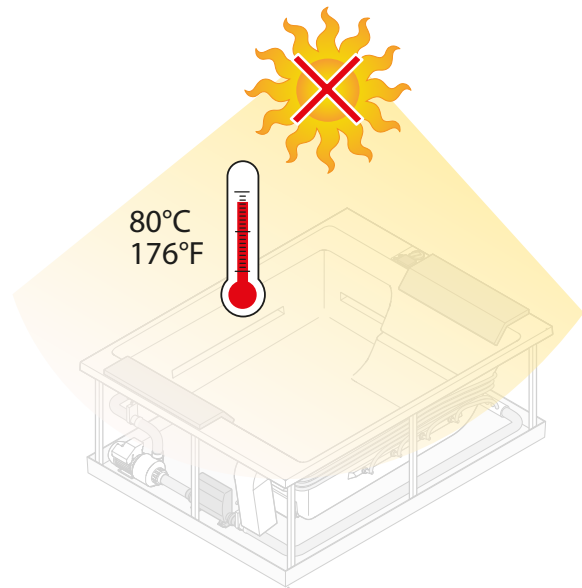

1 DESCRIPTION OF COMPONENTS

- 1 Control panel
- 2 2-speed pump (water + recirculation)
- 3 Skimmer with paper filters
- 4 Skimmer cover panel
- 5 Electronic control panel
- 6 Heater (integrated with the control unit)
- 7 Chromotherapy control unit
- 8 Frame
- 9 Base
- 10 Cushions
- 11 Preparation for heat pump (optional)

Ozone (option)

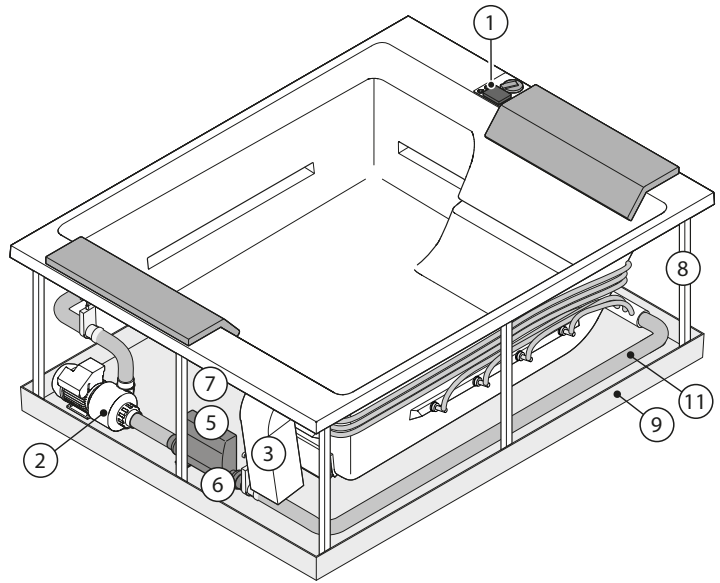


2 QUALIFICATIONS OF THE INSTALLER



Before installation, it is recommended to carefully read the safety warnings at the beginning of this manual and to always operate in perfect physical and mental condition.

The installer, qualified and authorised by the Manufacturer, must carry out the operations based on his or her professional qualifications. Any activities for which he or she is not qualified (e.g., plumbing or electrical connections) must be performed by specific and qualified professionals so as not to risk their own safety and that of others who interact with the equipment.

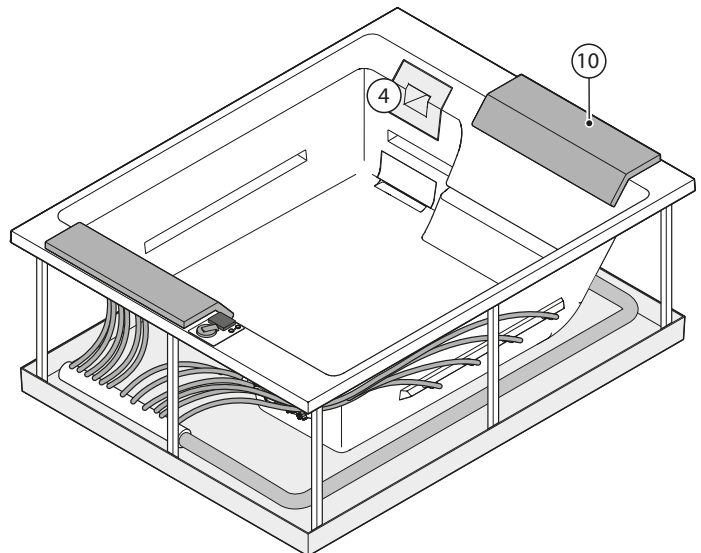



3 CONNECTIONS REQUIRED

To be used, the spa only requires an electrical connection (power supply).

Also prepare an electrical and plumbing connection to an exchanger (optional - if provided) - see following page.

The following pages will provide detailed explanations of how to perform these preparations.

EXAMPLES OF OUTDOOR/INDOOR SPA INSTALLATION.

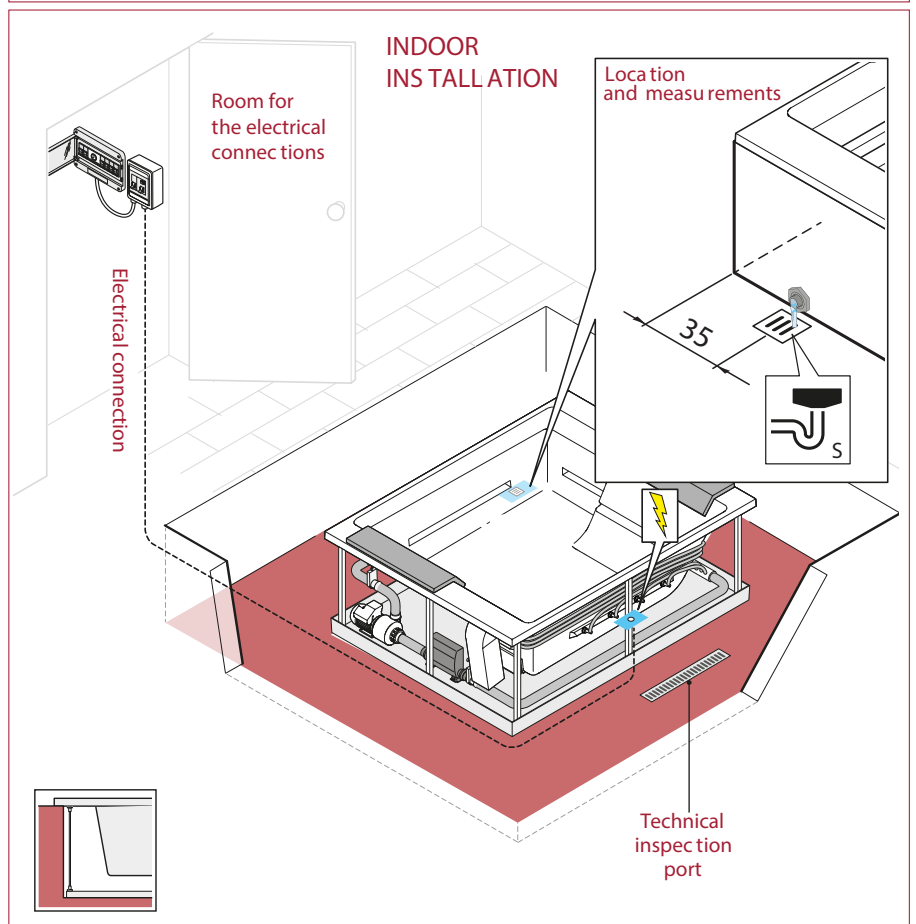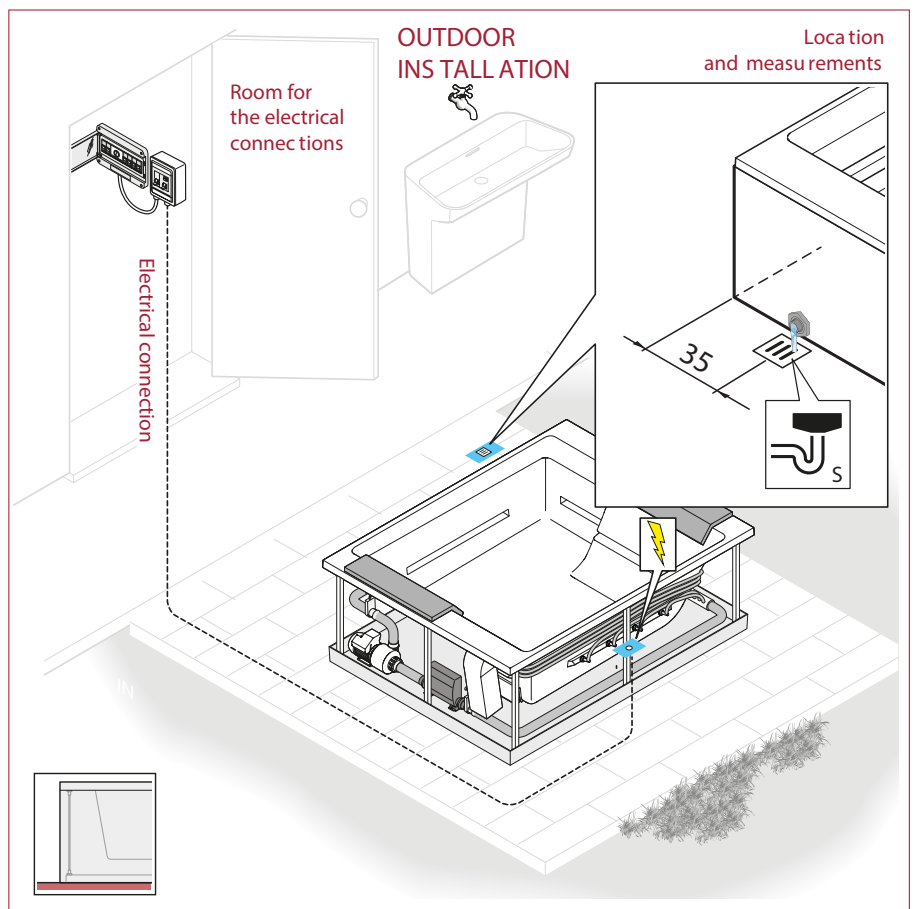

4 WATER SUPPLY



It is recommended to use ONLY tap water. If this is not possible refer to the "more information" section to the side.

CHARACTERISTICS OF THE WATER SUPPLY

The optimal values for the water supply are as follows:

- Hardness between 7°F and 14°F (fresh water) - 200 to 400 mg/l (ppm).
- Total alkalinity (TA) between 80 and 125 mg/l (8-12.5°F).
- pH between 7.4 and 7.8.
- minimum inlet pressure: 150,000 Pa (1.5 bar)
- minimum inlet pressure: 300,000 Pa (3 bar)
- Water suitable for human consumption.



More information

TAP WATER AND WELL WATER

To ensure maximum hygiene and durability of the spa it is essential to pay close attention to the quality of the water that will be used to fill it. It is important that the water used be drinkable. It is always advisable not to use well water because it may be very hard, rich in metals like iron and manganese, and have bacterial loads. Tap water is recommended. In the case of very hard or ferrous water it is always recommended to install softening and iron removal systems upstream. The company cannot be held responsible for issues related to the use of non-drinkable water or lack of installation of such systems. **The plumber is responsible for choosing the type of components to be used and the verification of compliance with the purity and potability parameters of the water supply.**



More information

WATER HARDNESS

Water hardness (TH) is determined by the total content of calcium and magnesium present in the water, coming from their soluble salts.

Water classification:

.....up to 7°F	=	Very soft water
From 7°F to 14°F	=	Soft water
From 14°F to 22°F	=	Slightly hard water
From 22°F to 32°F	=	Fairly hard water
From 32°F to 54°F	=	Hard water
.....more than 54°F	=	Very hard water

(1°F = 10 mg calcium carbonate per litre of water)


WATER ALKALINITY

Alkalinity (CAT) represents the concentration of bicarbonate ions present in the water. It is expressed as mg/L of calcium carbonate or in French degrees (°F). Ideal values of alkalinity range between 80 mg/L and 125 mg/L (8°F-12.5°F). Values outside of this range can more easily cause variations of the pH. Instead, alkalinity within the range noted makes it possible to "buffer" the pH value, resulting in fewer abrupt variations.

WATER PH

What is pH?

The pH is a chemical parameter that gives an idea of the acidity or basicity of the water. It can assume values between 0 and 14. By definition water is considered neutral if its pH is equal to 7. It is acidic if the pH is lower than 7 and basic if the pH is greater than 7. Disinfectants have an ideal pH at which they are most effective. In the case of heated water treated with bromine products it is recommended to keep the pH value in the range from 7.4 to 7.8 using chemical correctors as needed if the pH is higher or lower to bring the pH value back to the recommended interval.

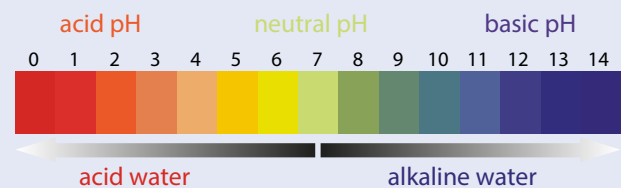

5 CLEANING THE PAPER FILTER

Cleaning/replacing the paper filter depends on how often the minipool is used.



In general, rinse the cartridge every 2-3 weeks with clean water to remove hair and other foreign substances. Be careful to clean well between the folds of the filter.

At each change of water, the filter cartridge must be immersed in a solution suitable for cleaning this type of filter, possibly overnight, or replaced.


In any case refer to the instructions provided by the manufacturer of the cleaning product used.




Paper filters should be mounted when they are completely dry.

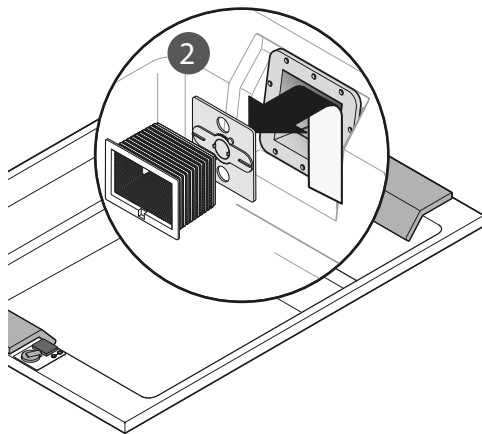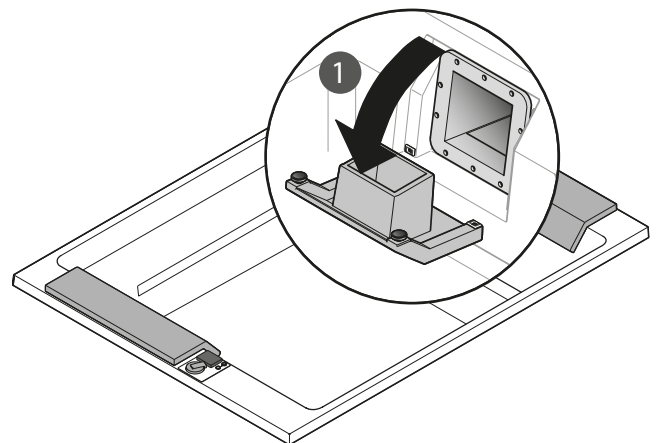

SOUL
150

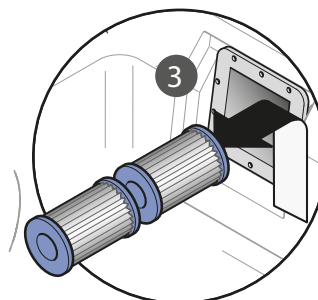

6 EMPTYING THE MINIPOOL

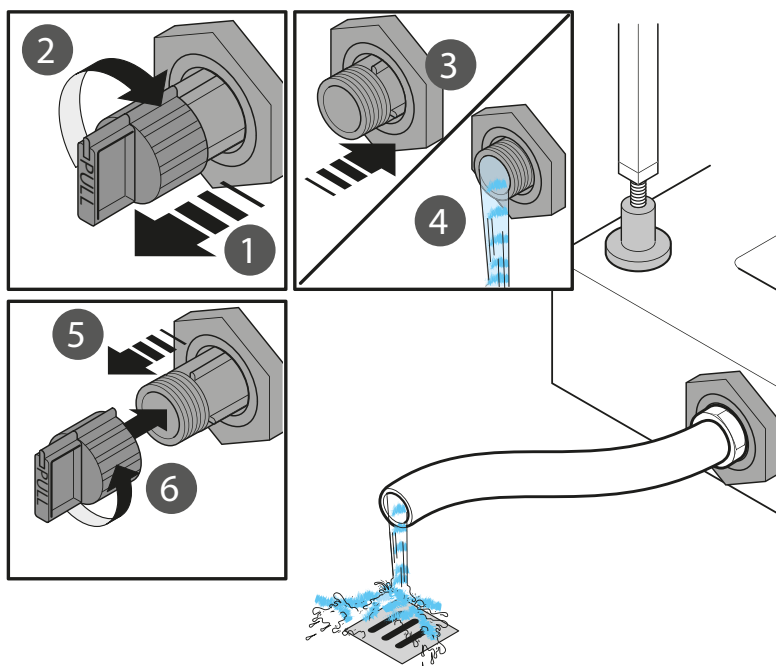

Emptying takes place by carrying out the operations indicated in the figure on the side:

- 1 - Pull the knob out;
- 2 - Unscrew the cap;
- 3 - Loosen the check valve;
- 4 - The water is emptied.

If it is necessary to refill the spa, see the pertinent chapter on page 20.



The water can be drained at any time, without people inside the spa.

It is advisable to always empty the spa during maintenance and at the end of the season.



Before emptying the spa, especially if a shock treatment has just been performed, make sure that the values of disinfectants and additives are at normal values.

7 ELECTRICAL CONNECTIONS

The Tresse spas are built in compliance with UL laws (XXXXXXXXX) and are tested during production to ensure the safety of the installer and user.

The connection must be made by an experienced, qualified electrician.

a) READ AND FOLLOW ALL INSTRUCTIONS

b) A green coloured terminal or a terminal marked G, GR, Ground, Grounding, or the symbol* is located inside the supply terminal box or compartment. To reduce the risk of electric shock, this terminal must be connected to the grounding means provided in the electric supply service panel with a continuous copper wire equivalent in size to the circuit conductors supplying this equipment. * IEC 60417, Symbol 5019.


c) At least two lugs marked "BONDING LUGS" are provided on the external surface or on the inside of the supply terminal box or compartment. To reduce the risk of electric shock, connect the local common bonding grid in the area of the hot tub or spa to these terminals with an insulated or bare copper conductor not smaller than No. 6 AWG.

d) All field-installed metal components such as rails, ladders, drains, or other similar hardware within 3 m of the spa or hot tub shall be bonded to the equipment grounding bus with copper conductors not smaller than No. 6 AWG.

e) SAVE THESE INSTRUCTIONS.



The Manufacturer is not responsible for connections made in a way that does not comply with local codes, the specifications in this manual or tampering with any electrical component of the spa.

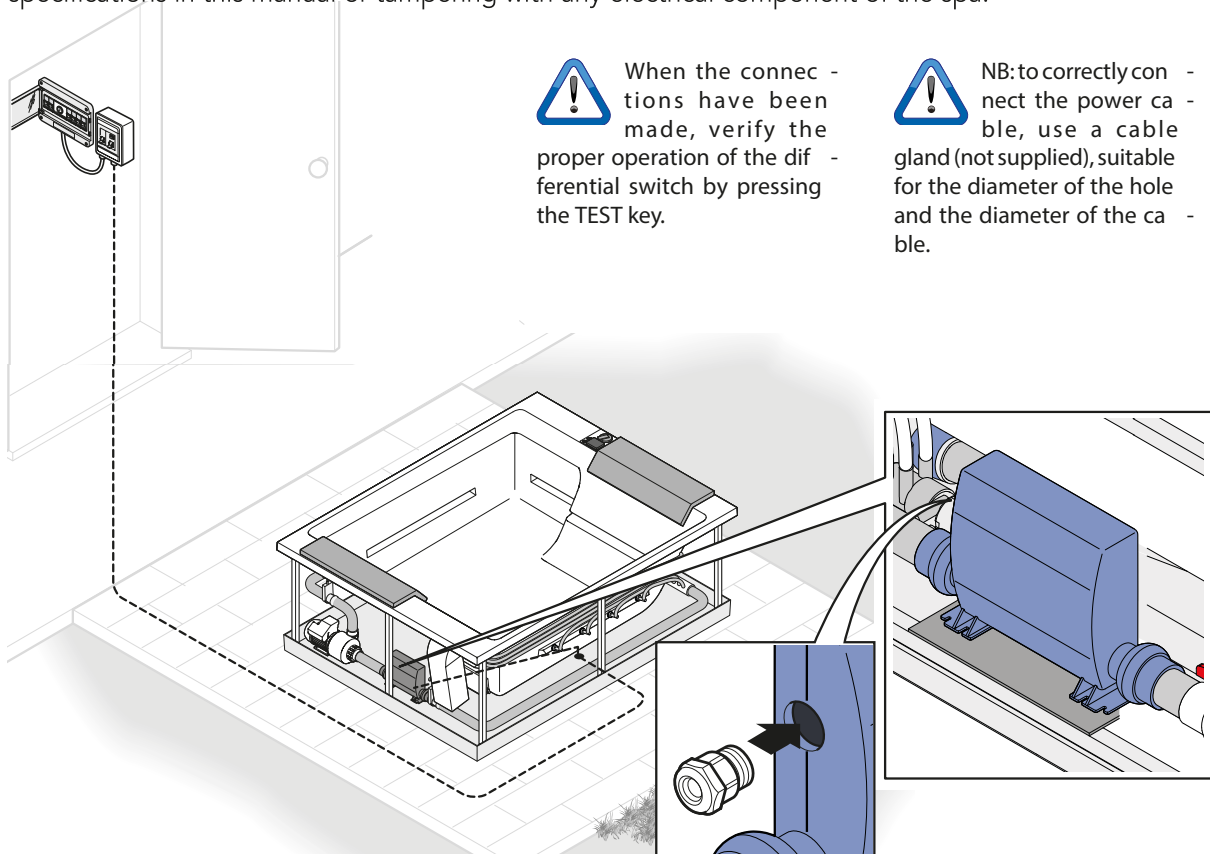


When the connections have been made, verify the proper operation of the differential switch by pressing the TEST key.




NB: to correctly connect the power cable, use a cable gland (not supplied), suitable for the diameter of the hole and the diameter of the cable.

WARNING – This product is provided with a ground-fault circuit-interrupter (give location). The GFCI must be tested before each use. With the product operating, open the service door. When the product stops operating, this merely indicates that the door is equipped with an electrical interlock. Next, push the test button on the GFCI and close the service door. The product should not operate. Now open the service door, push the reset button on the GFCI and close the service door. The product should now operate normally. When the product fails to operate in this manner, there is a ground current flowing indicating the possibility of an electric shock. Disconnect the power until the fault has been identified and corrected.

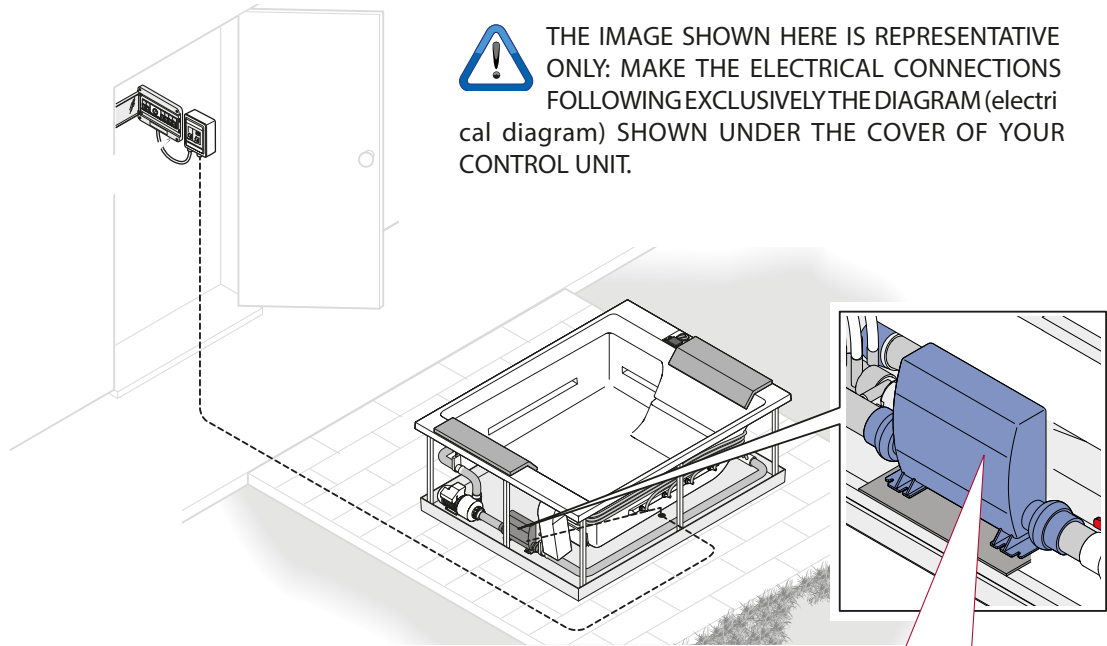


THE IMAGE SHOWN HERE IS REPRESENTATIVE ONLY: MAKE THE ELECTRICAL CONNECTIONS FOLLOWING EXCLUSIVELY THE DIAGRAM (electrical diagram) SHOWN UNDER THE COVER OF YOUR CONTROL UNIT.

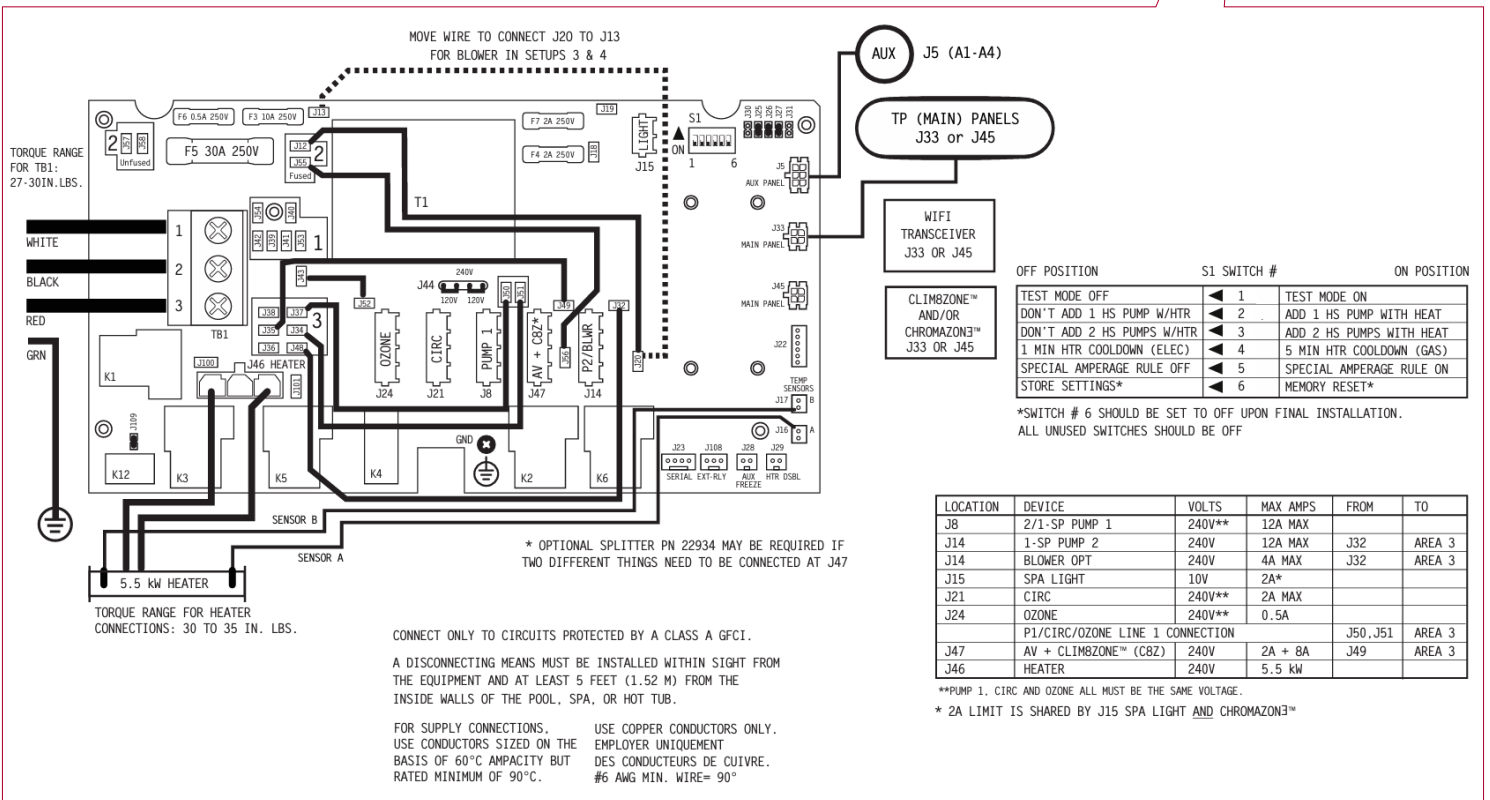

SAFETY ZONE



Local regulations prohibit any electrical installation (plug sockets, switches, lamps, etc.) in the area surrounding the spa for a distance of at least 60 cm and a height of 230 cm.

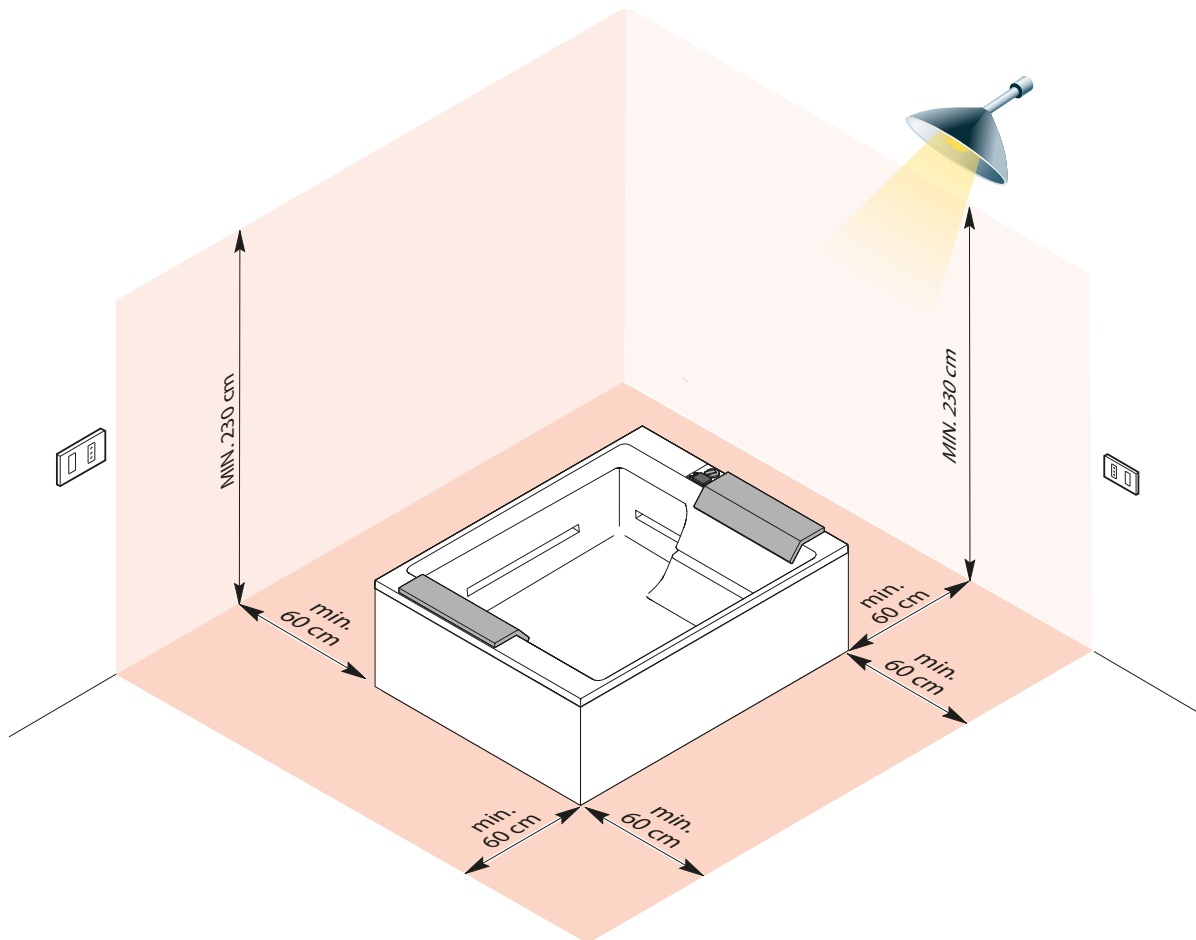

8 TESTING AFTER INSTALLATION

MAKE SURE THAT...	✓
The spa is level and stable.	
Electrical connections are made correctly in accordance with local and national codes and that the cables are not damaged, crushed or abnormally bent.	
The spa's drainage valve is closed.	
The spa is not leaking.	
Tools, documents or other items were not left under the spa or in the recess.	

1 FILLING THE SPA

Perform a preliminary cleaning of the spa using a bit of water and a mild detergent.

Do not use cloths or cleaners that are abrasive, aggressive or that contain solvents because they could irreparably damage the surface of the spa.



Do not start any operation until the spa has been completely filled, otherwise the spa could be damaged.

Before filling, once again check the quality of the water supply. This is very important for the well-being of the users and for the long life of the spa.



For more information see chapter "Characteristics of the water supply" on page 15

FILLING

Make sure you have opened all the valves of the hydraulic system before filling the spa so as to allow all the air to come out of the system during the filling process.

For filling, use a rubber hose as shown in the figure. The water used must meet the requirements detailed in the previous pages and summarised here:

Potability


Hardness (TH): between 10°F and 25°F
(100 mg/l-250 mg/l)

pH: between 7.4 and 7.8

Alkalinity: 80 and 125 mg/l (8-12.5°F)

Fill the spa until the water reaches about 6-7 cm from the upper edge.

Manual filling with a garden hose

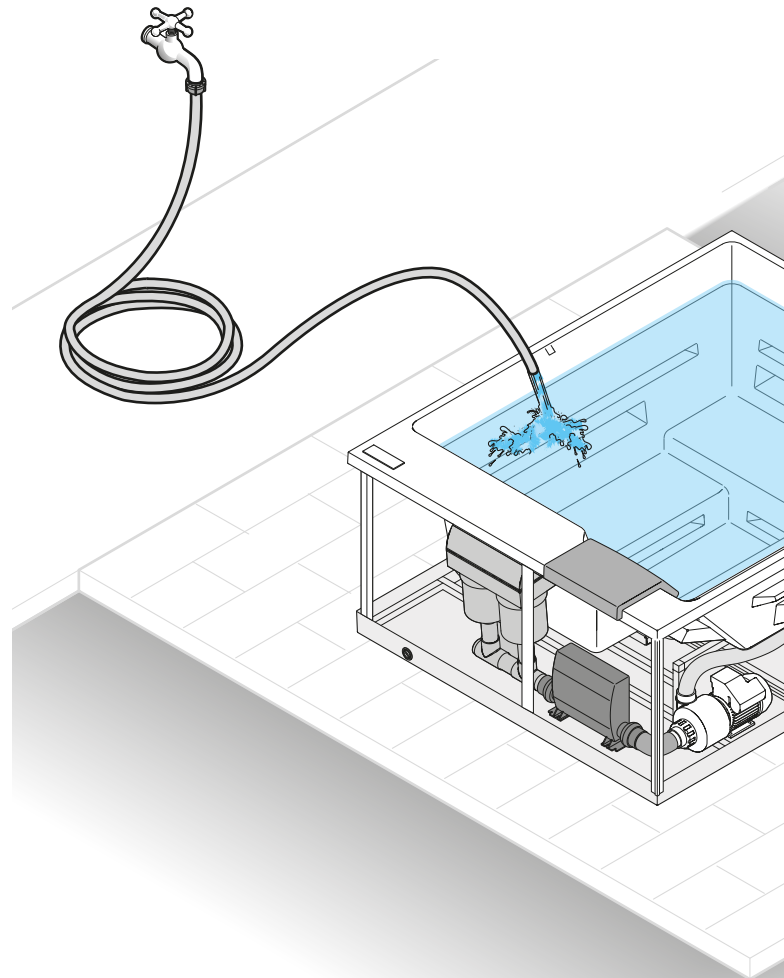

2 FIRST RUN

LOCK THE PANEL AND/OR SETTINGS

Fill the spa to its correct operating level. Be sure to open all valves and jets in the plumbing system before filling to allow as much air as possible to escape from the plumbing during the filling process. Air may be trapped in the plumbing after filling the spa tub. Remove trapped air by priming the pumps. Priming will be discussed shortly.

After turning the power on at the main power panel, the spa control panel will display a splash screen or startup screen. After the initial start-up sequence, the control will enter Priming Mode and display a Priming Mode screen (view next page **C**). Only pump icons appear on the Priming Mode screen. During Priming Mode, the heater is disabled to allow the priming process to be completed without the possibility of energizing the heater under low-flow or no-flow conditions.

WHAT IS PRIMING?

Priming removes trapped air from the plumbing. How do you know when a pump is done priming? Priming is complete when water flows from the jets without air bubbles. So, watch the jets as you prime the pump. If your spa has more than one pump, prime each pump one at a time. Why prime one at a time? If multiple pumps are running, it is too difficult to determine which pump is circulating air bubbles, or the flow from one pump may hide the flow from another pump.

Sometimes momentarily turning the pump Off and On will help it to prime. Do not do this more than 5 times. If the pump will not prime, shut Off the power to the spa and call for service.

PRIMING MODE

Priming Mode will last for 4 minutes, or you can manually exit Priming Mode after the pump(s) have primed. Regardless of whether Priming Mode ends automatically or you manually exit Priming Mode, the control system automatically returns to normal heating and filtering at the end of Priming Mode.

To set the desired language, please refer to the "SELECT LANGUAGE" chapter in the Use and Maintenance Manual.



FOLLOW THESE STEPS TO PRIME A TWO-SPEED PUMP:

Press the button (JETS 1, JETS 2, etc.) for that pump once to turn it On at low speed. Press the button again to run the pump at high speed. Run the pump at high speed for 2 minutes. If priming is not complete after 2 minutes, turn Off the pump and repeat the process.

WHICH PUMP IS THE HEATER PUMP?

When the spa has just entered Priming Mode, press the Light button **E** and see if any water flows. If so, you have a circulation pump serving as the heater pump. If not, a two-speed pump serves as the heater pump. A circulation pump is controlled with the Light button **E** (in Priming Mode only). A two-speed heater pump is controlled by pressing the JETS 1 button **B**.

Once the heater pump is primed, prime any additional pumps.

IMPORTANT: A pump should not be allowed to run without priming for more than 2 minutes. Under NO circumstances should a pump be allowed to run without priming beyond the end of the 4 minute Priming Mode. Doing so may cause damage to the pump and in some cases may cause the system to energize the heater and go into an overheat condition.

EXITING PRIMING MODE

Priming Mode ends automatically. However, you can manually exit Priming Mode during this time by pressing the Back button **A**.

When Priming Mode ends (automatically or manually) the panel will display dashes **F**. Once the control system cycles water through the heater for one minute, the dashes will be replaced by the water temperature.

If any alarms appear during initial startup, read the instructions provided in the following table. If the solution is not possible, immediately contact the Manufacturer to request technical support. In the meantime, do not try to repair or use the minipool but rather disconnect it from the electricity and water supplies.

MESSAGE LIST

Possible freezing condition

A potential freeze condition has been detected, or the Aux Freeze Switch has closed. All water devices are activated. In some cases, pumps may turn On and Off and the heater may operate during freeze protection.

The water flow is low

There may not be enough water flow through the heater to carry heat away from the heating element. Heater start up will begin again after about 1 minute.

The heater is dry

There is not enough water in the heater to start it. The spa is shut down. After the problem has been resolved, you must reset the message to restart heater start up.

The water is too hot

The system has detected a spa water temp of 110°F (43°C) or more, and spa functions are disabled. The system will auto reset when the spa water temp is below 108°F (42°C). Check for extended pump operation or high ambient temperature.

The water flow has failed

There is not enough water flow through the heater to carry the heat away from the heating element and the heater has been disabled. After the problem has been resolved, reset the message.

The heater is too hot

One of the water temp sensors has detected 118°F (about 48°C) in the heater and the spa is shut down. You must reset the message when water is below 108°F (about 42°C).

The water level is too low

This message can only appear on a system that uses a water level sensor. It appears whenever the water level gets too low (or the water level sensor is disconnected), and automatically disappears when the water level is adequate. Pumps and the heater turn Off when this message appears.

The heater may be dry

Possible dry heater, or not enough water in the heater to start it. The spa is shut down for 15 minutes. Reset this message to reset the heater start-up.

Hot fault


A Pump Appears to have been stuck On when spa was last powered Off. Power Off the spa. DO NOT ENTER THE WATER. Contact your dealer or service organization.

Communications error


The control panel is not receiving communication from the control system (view diagram below). This can appear briefly during system start-ups. This is normal. If it does not go away quickly, call for service.




- 1 - measure from the upper edge of the base tray to the lower part of the tub edge (figure 1)
- to this measure, add 1 cm, which will be inserted under the edge (figure 2)
- adjust the bracket to the measurement resulting from the two previous points, and lock it with an Allen key (figure 3).
- insert panels A (without corner pieces) as indicated in (fig. 4), starting from under the edge and then placing the bracket on the base tray.

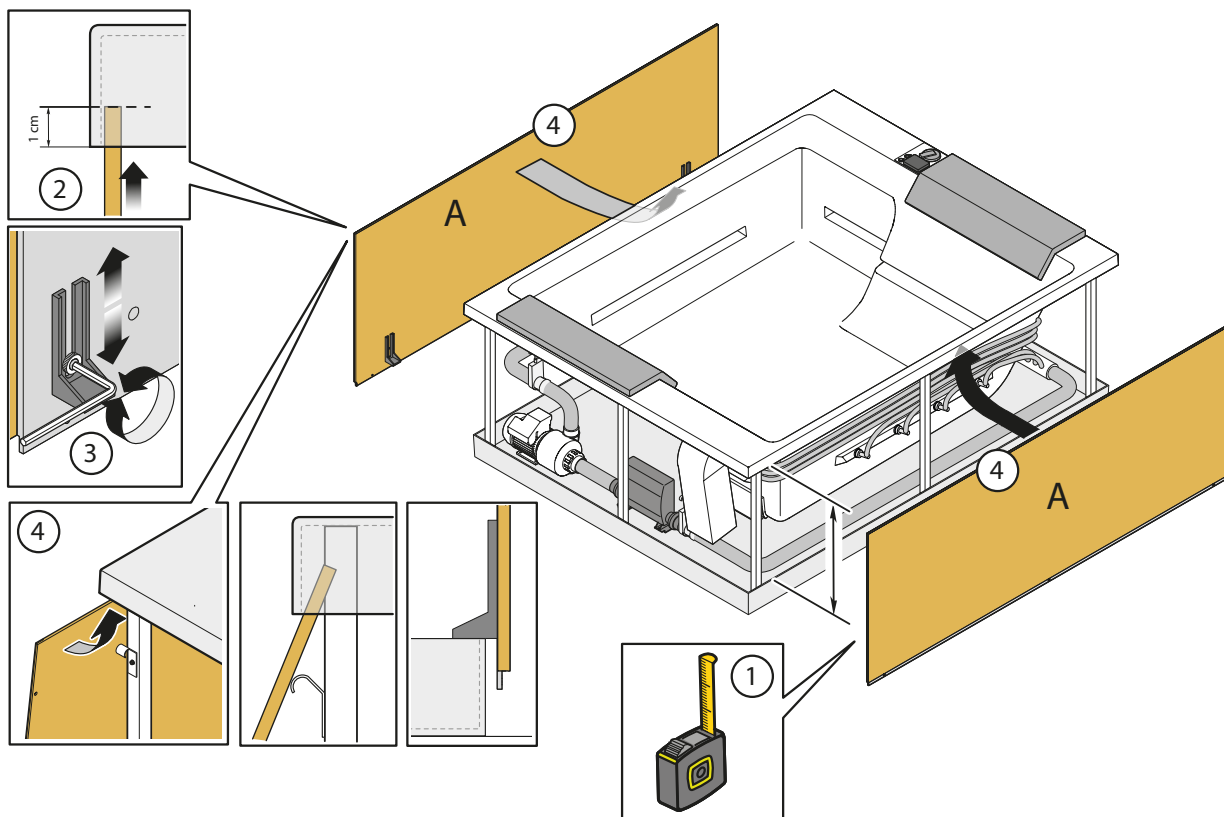


- 2 Proceed by installing panels "A" first and then panels "B".

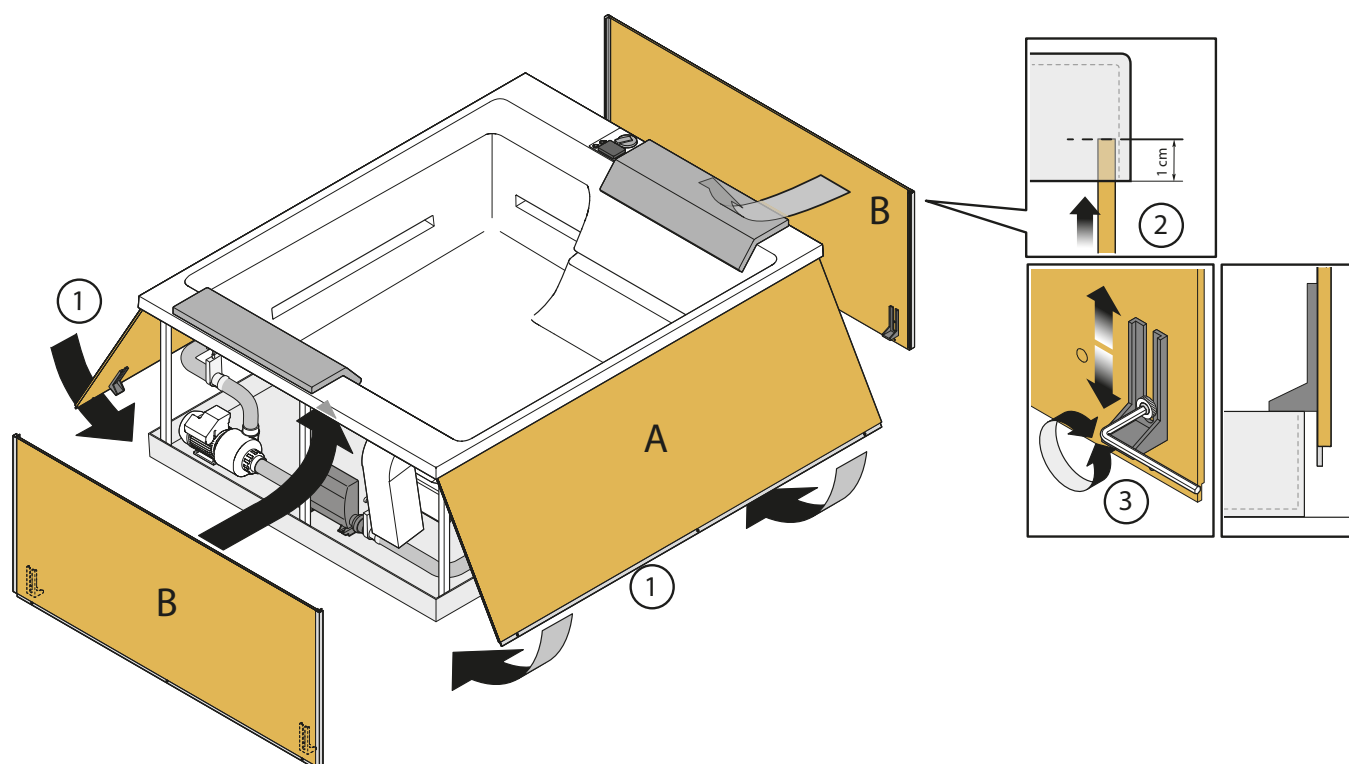

- 3 On the corners, insert the aluminium profiles of panel B on panel A and ensure correct alignment.

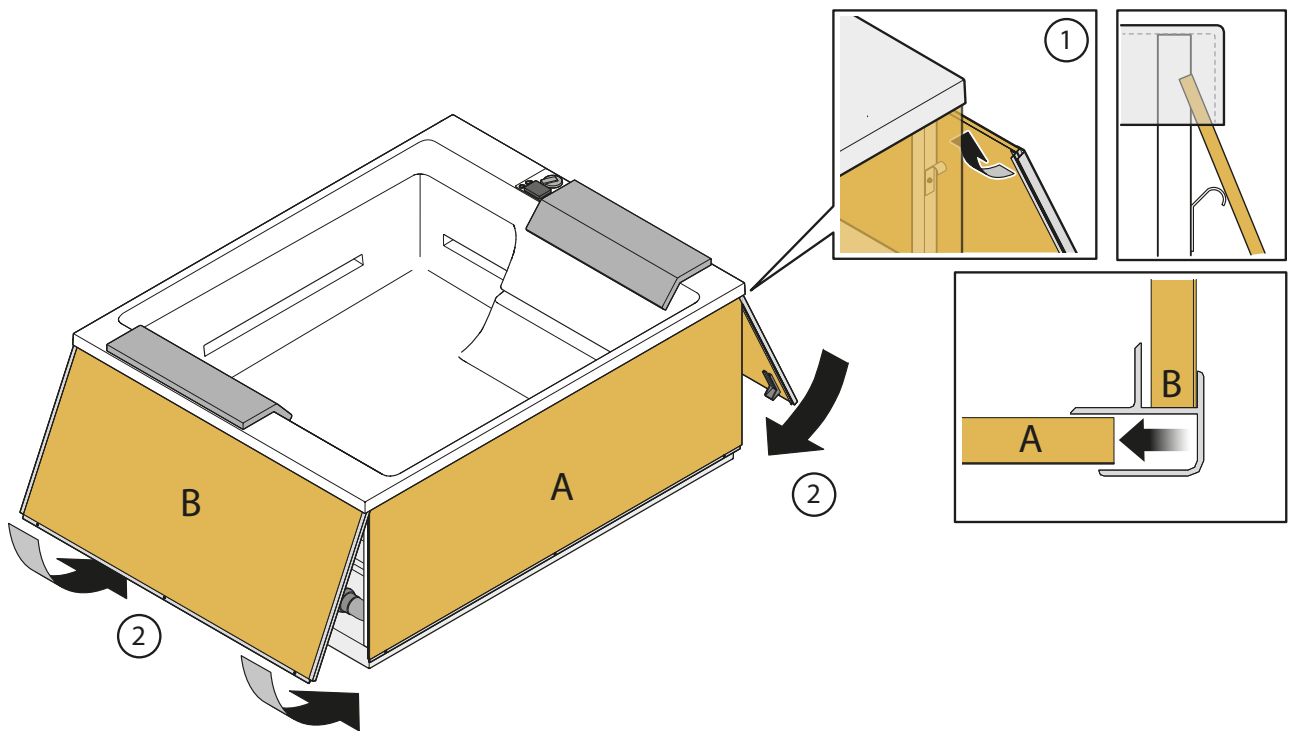

- 4 Secure the panels to the base with the supplied screws. Remove the protective film from the panels.

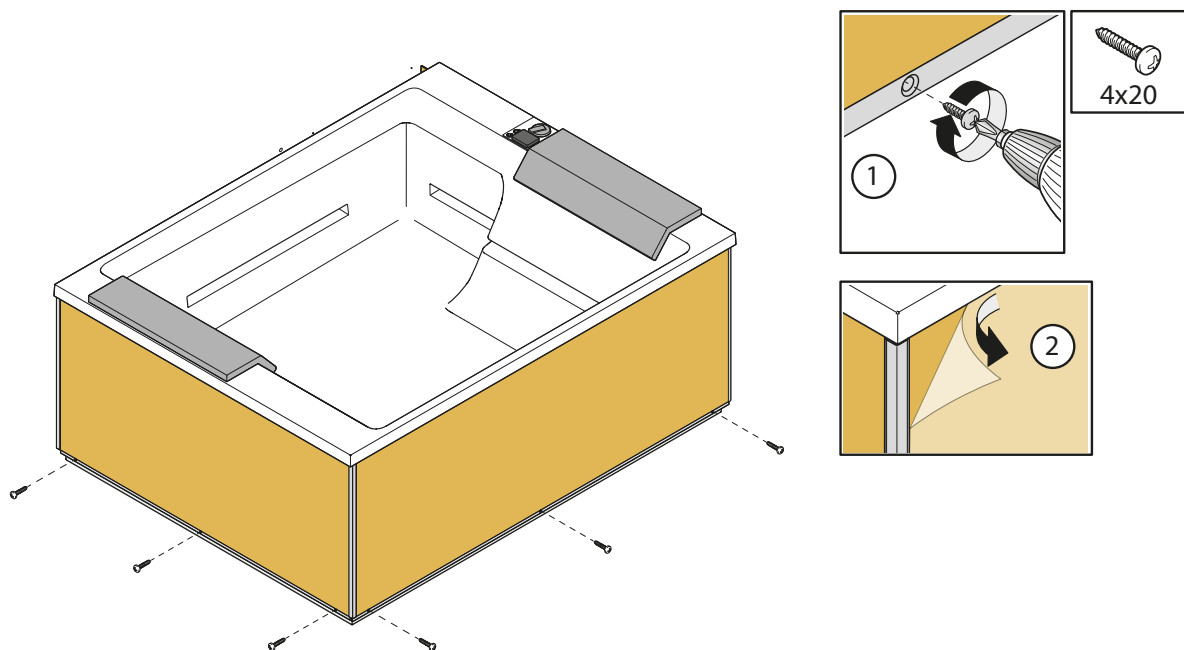





Do not leave the empty minipool in DIRECT SUNLIGHT. The surface temperature could rise above 80°C resulting in serious damage, including cavitation and the deformation of the surface and components (damage caused by direct exposure to sunlight is not covered by the warranty).

Under these conditions or when not used, advise the owner to use a fixed or mobile cover to protect the minipool (we recommend the optional Tresse covers).

In addition to preserving the surfaces, the cover will keep the water hot and protected against falling leaves and other outdoor debris.

The cover is especially useful if the minipool is installed outdoors. In this case it might be useful to anchor it with lashing straps in order to prevent the wind from moving it or blowing it off.

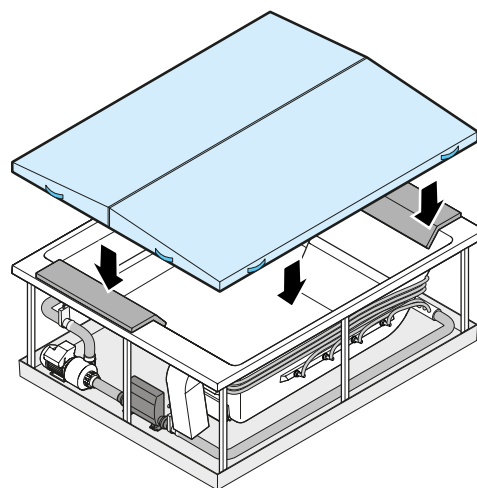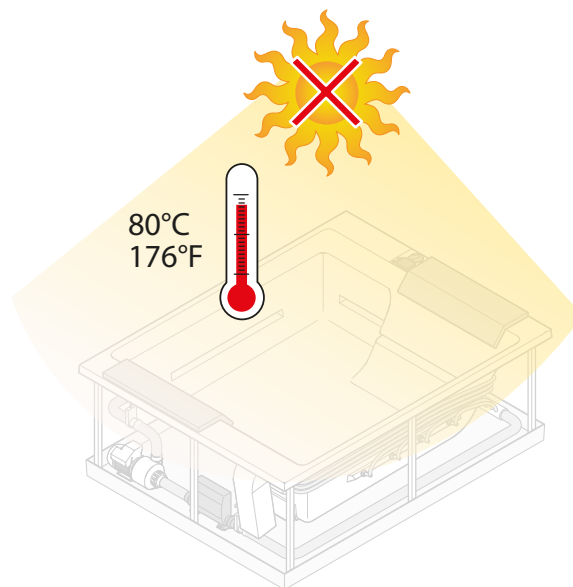

Maximum care has been paid to guarantee the accuracy of this manual.

The Manufacturer reserves the right to modify the equipment or the documentation at any time, without notice.

Therefore, there might be small differences between this manual and the product you have received: we apologise in advance for any inconvenience.

The total or partial reproduction of this manual without the Manufacturer's consent is prohibited. Measurements are purely indicative and not binding.

The original language of this manual is Italian: the Manufacturer is not responsible for any mistakes in translation/interpretation.

treesse

www.gruppotreesse.it

GRUPPO TRE S s.p.a.
01036 Nepi (VT) - Italia
S.S. Cassia km. 36,400
zona ind. Settevene
tel. (+39) 0761 527242
fax (+39) 0761 527223
info@gruppotres.it